



BED LINER DISPENSER


Installation Instructions

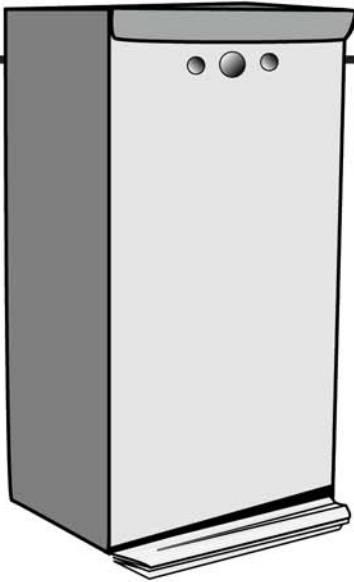

Installation

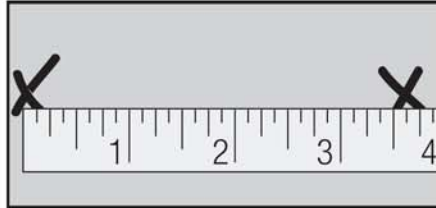


1. Measure and mark on the wall two holes 3 5/8" away from each other.

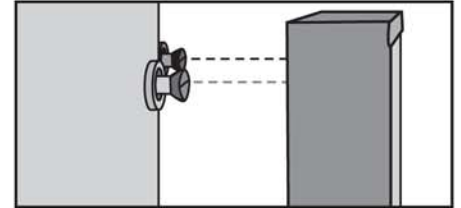


5. Place the unit against the wall making sure the heads of the screws line up with the eyelets on the back of the unit.

Mounting Hardware:

- 2 Hollow Wall Anchors
- 2 Mounting Screws

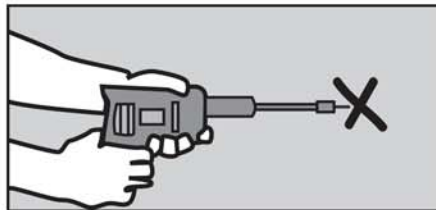



2. Using a 1/8" drill bit, drill at the marked holes.

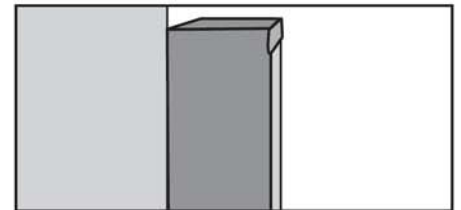


6. Slide the unit into place making sure it is securely hanging on the screw head flush with the wall.

Tools You Will Need:


- Drill
- 1/8" Drill Bit
- Screwdriver

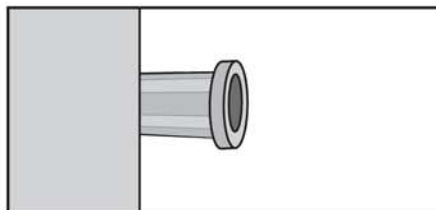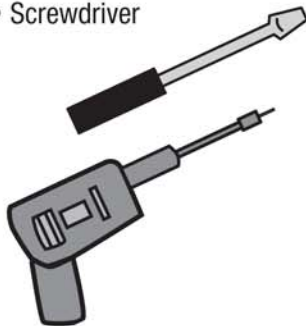


3. Place the anchors into the holes.

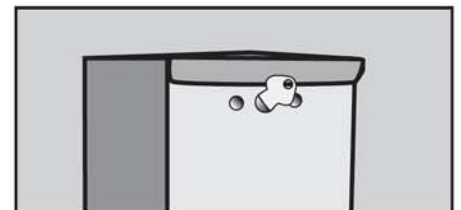

7. Using the key, unlock the top of the unit to insert bed liners.

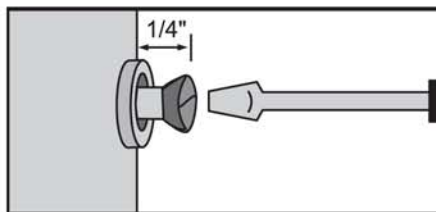

4. Using a screwdriver, insert the screws into the anchor, leaving the screw head out approximately 1/4".

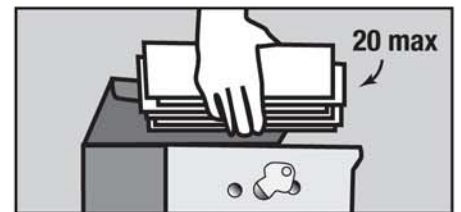

8. Place no more than 20 liners in your hand lengthwise (parallel to the back) and place them into the unit rotating you hand inside so the liners lay flat.

For Technical Assistance, Call SSC, Inc. (Safe-Strap Co.) 1-800-356-7796

Outside US, call 973.442.4623 • Email us at info@safestrap.com
or visit our website at www.diaperdepot.com